




⋮ D Series

TEMPERATURE AND MOISTURE INDICATOR

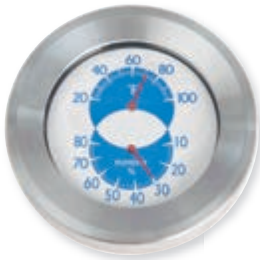


HGT - 1/4

WARNING

Risk of injury. Release all air pressure from system before servicing.

⋮ HOW TO INSTALL THE GAUGE SNUBBER ON THE HGT-1/4

Side view

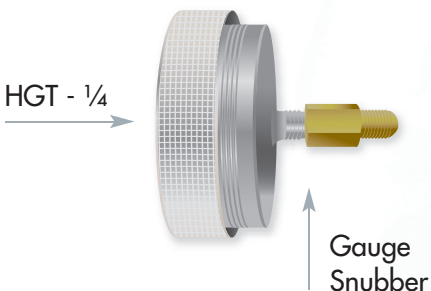

Replace air dryer cartridge
when % R.H. exceeds 80%

INSTALLATION

Temperature and
Moisture Indicator



2104 Francis-Hughes, Laval (Qc) Canada H7S 1N7
Tel.: 1-888-828-1122 | Fax: 1-888-828-1133
info@super-dry.com
www.super-dry.com