



ATD Series

AIR TOOL DRYER



Replacement kit for ATD-1/4 & ATD-1/2

WARNING

Risk of injury. Release all air pressure from system before servicing.

ATD Series


HOW TO INSTALL A NEW REPLACEMENT KIT

- Unscrew the caps.
- Remove everything from the dryer but keep the grids.
- Insert parts in the order shown on the other page.
- Make sure that the threads are clean, screw the covers back being careful not to cross thread. **CROSS THREADING THE CAP WILL DAMAGE THE UNIT AND VOID THE WARRANTY.**
- Open air supply **SLOWLY**. Check caps for air leakage. If leakage occurs, shut off air supply, relieve pressure from unit by manually activating the drain cock on the ATD. Make sure that the gaskets and covers are installed properly.

REPLACEMENT KIT INCLUDES

- Desiccant Bag x 1
- Felt Pad x 2
- Paper Filter x 2
- Gasket x 2

INSTALLATION

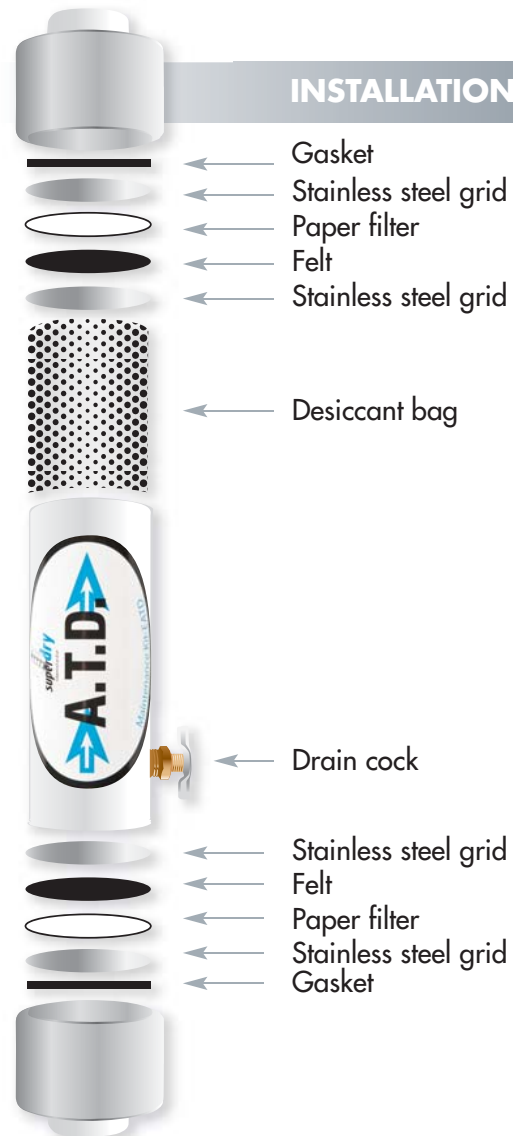

2104 Francis-Hughes, Laval (Qc) Canada H7S 1N7
 Tel.: 1-888-828-1122 | Fax: 1-888-828-1133
 info@super-dry.com
 www.super-dry.com