



## ⋮ D Series

TEMPERATURE AND MOISTURE INDICATOR




**HGT - 1/4**

### **WARNING**

Risk of injury. Release all air pressure from system before servicing.

### ⋮ HOW TO INSTALL THE GAUGE SNUBBER ON THE HGT-1/4

Side view

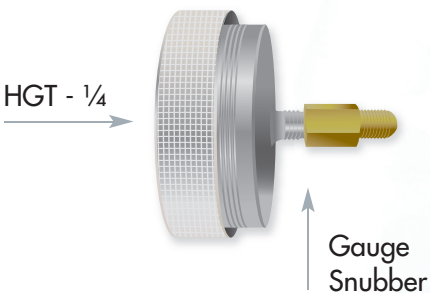

# WARNING

WARRANTY IS VOIDED IF  
SNUBBERIS NOT INSTALLED

Replace air dryer cartridge  
when % R.H. exceeds 80%

## INSTALLATION

Temperature and  
Moisture Indicator



Tel.: 1-888-828-1122 | Fax: 1-888-828-1133  
info@super-dry.com

[www.super-dry.com](http://www.super-dry.com)