



# :D Series

## COMPRESSED AIR



### Replacement kit for **D-3** & **D-4**

#### WARNING

Risk of injury. Release all air pressure from system before servicing.

## :D Series


### HOW TO INSTALL A NEW REPLACEMENT KIT

- Remove the cover clamp and cover.
- Remove everything inside the dryer but keep the grids.
- Insert parts as shown on the diagram.
- Inspect the o-ring in the cover for damage and replace if necessary.
- Install cover and clamp. Do not tighten the clamp bolt more than 8 Lbs/in<sup>2</sup>.
- Open air supply **SLOWLY**. Check cover for air leakage. If leakage occurs, shut off air supply, relieve pressure from unit by manually activating the drain valve under the dryer. Make sure that the o-ring and cover are installed properly.

#### REPLACEMENT KIT INCLUDES

- Desiccant Bag x 1
- Felt Pad x 2
- Coalescer Element x 2
- O Ring x 2

### INSTALLATION

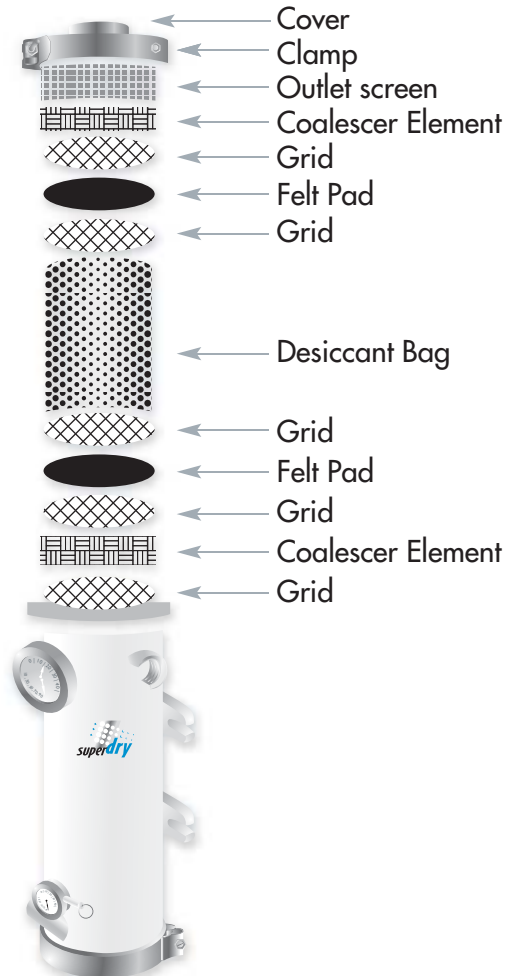

2104 Francis-Hughes, Laval (Qc) Canada H7S 1N7  
Tel.: 1-888-828-1122 | Fax: 1-888-828-1133  
info@super-dry.com  
[www.super-dry.com](http://www.super-dry.com)